


# RESETTING A GENERATOR FAULT

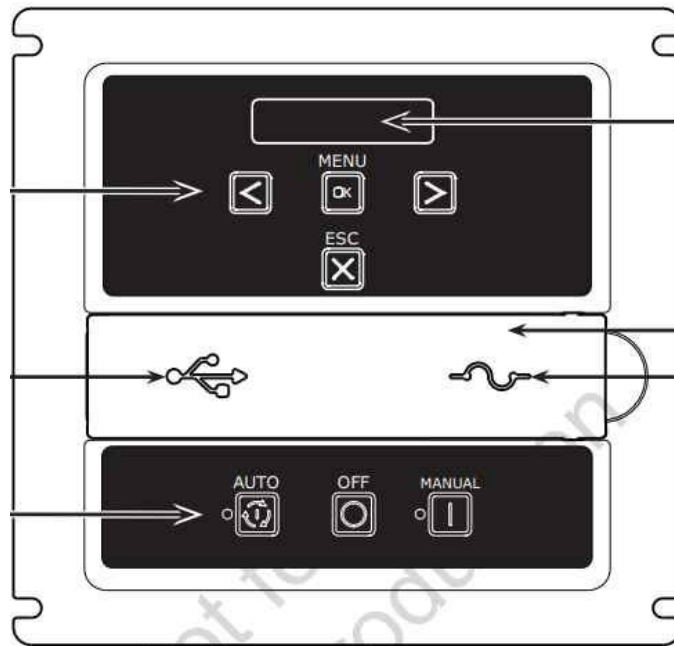

These instructions are to reset a fault on the Briggs and Stratton/GE generators. When these generators get a fault code it will read on the screen, and the display scrolls. Sometimes it can be hard to read. Be patient and record what the screen says.

- 1) Press and hold the OFF button for 5 seconds. The screen will turn off.
- 2) Wait at least 15 seconds, then press and hold the AUTO button. The machine will return to the automatic standby mode.
  - If in an outage the machine will try and start. Allow it to start. If the machine starts, let it run. If it faults, call us with the fault code.
- 3) To confirm the unit is working when not in an outage, press the manual button and release.
  - The engine will begin cranking. Do not shut it off.
  - If the engine starts, let it run for 15 minutes, then press the OFF button to shut down. After the engine has stopped completely, press the AUTO to return to automatic mode.
  - If the unit did not start after the first cycle, it will pause and try again. Let the machine go through this sequence. If it still fails to start (approx. 2 minutes), the machine will display a fault code. Call us with this code.